

**fullstop**<sup>®</sup>  
SECURITY

# CENTUCIAN

## QF

Model. FCWC20-QF

# Wheel Clamp

# User Manual

PLEASE READ THIS  
MANUAL BEFORE  
FIRST USE.


TIME INVESTED IN  
CORRECT FITMENT  
IS REPAID IN THE  
LEVEL OF SECURITY  
THAT IS ACHIEVED.



by  purpleline<sup>®</sup>

## Parts Identification

1. Cover Plate
- 2a. Lock Portion (male)
- 2b. Keys (x2)
- 2c. Lock Portion (female)
3. Protective Lock Cap
4. Rear Arms (x3)
5. Top Front Arm
6. Right-Hand Front Arm
7. Left-Hand Front Arm
8. Hex Screws (x12)
9. Hex Key
10. Security Plugs for Hex Screws (x12)

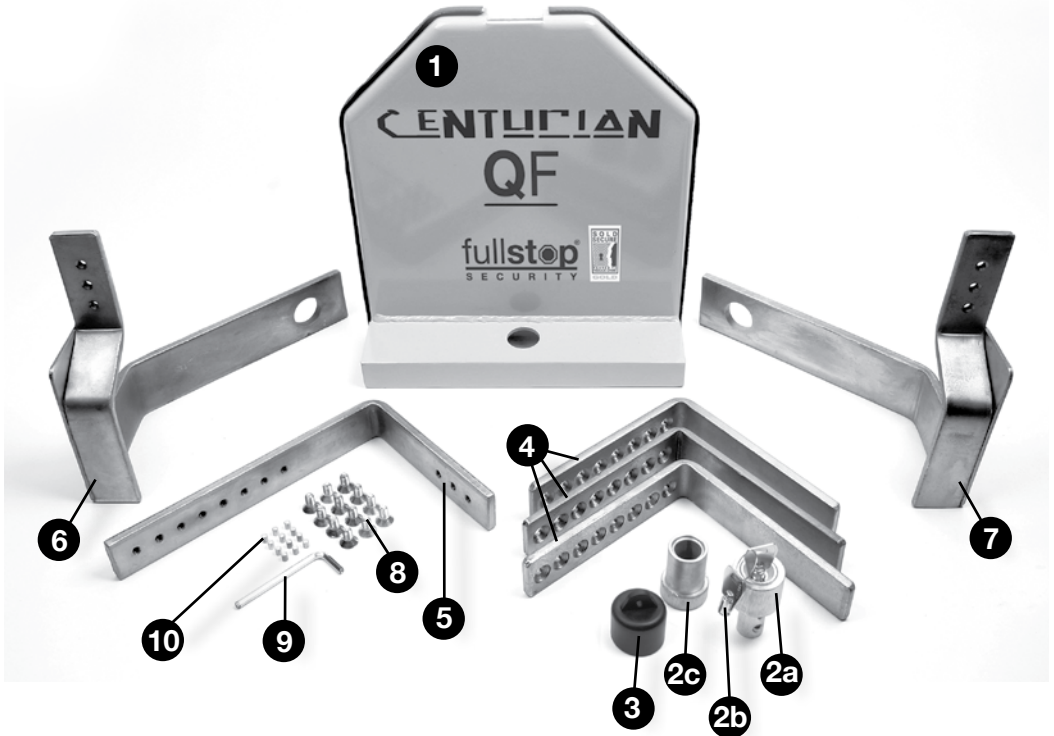


## Assembly & Installation


It is recommended that, when unpacked, you lay out all parts and check them against the photograph above.



**A.** Hold together one of the front arms (6 or 7) together with a rear arm (4). Offer these up to the wheel to determine which holes you will need to use to suit the width of your tyre.

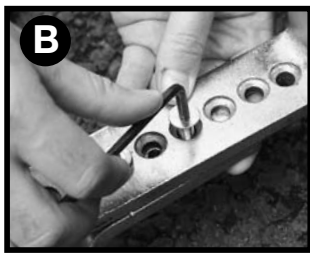

**B.** Once you have determined a suitable width insert the hex screws (8) (3 per arm) and tighten sufficiently. Repeat this procedure for the other two arms.

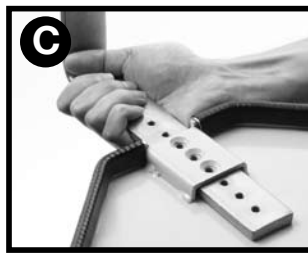

**C.** Slide the top arm assembly into the channel on the back of the cover plate. Slide up or down to select the appropriate hole to suit your wheel diameter and insert and tighten the hex screw.



**D.** Place the top arm assembly behind the tyre and rotate the cover plate so that it vertically aligned to the wheel.




**E.** With the cover in position on the wheel slide both left and right arms into position behind the wheel and slot the front of the bars into the box section along the bottom of the cover plate.



**F.** With the arms in position look down the lock hole and align to the side arm holes. Adjust the positioning until all three holes are aligned. Place the lock in the aperture and through the aligned holes. Remove the key and your Centurian Wheel Clamp is now fitted. **Note: If all three holes do not align, adjust the height position of the top arm until alignment is achieved.**

Two keys are provided.  
**Please keep the keys in a safe, secure place.**

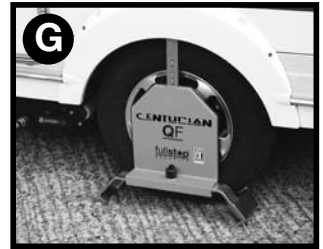

**G.** Once you are satisfied with the fit you should disassemble the wheel clamp and hammer in the security plugs (10) into the top of each hex screw. This will prevent the hex screws from being removed, using a hex key, in the event of an attack on the clamp. If the wheel clamp is to be used on a wheel with different dimensions at a later date, the security plugs can be removed by carefully drilling them out.



***Disclaimer***

If used properly, your FullStop product will be an effective deterrent. However, nothing can stop the efforts of the most determined thief, and to this end no liability is accepted for any loss and/or damage caused by any illegal activity including theft or vandalism. Liability also not accepted for any loss and/or damage arising from misuse, unauthorised repair or alteration and failure to follow the user guide directions. No form of consequential loss what so ever will be accepted.



© Copyright 2008. Purple Line Limited. 2 Lady Lane industrial Estate, Hadleigh, Suffolk, IP7 5AL, England

**Web:** [www.fullstop-security.com](http://www.fullstop-security.com) **E-mail:** [support@fullstop-security.com](mailto:support@fullstop-security.com) **Tel:** 0870 444 8688

Photographs for illustration purposes only. Actual product may differ slightly.

Purple line Limited reserve the right to alter product specification without prior notice.